

Kubota Super Mini Series

Kubota 05 Series

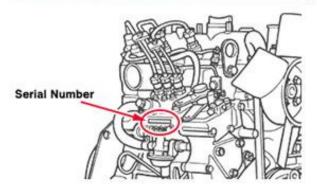


 Located on the side of fixing point of injection pump

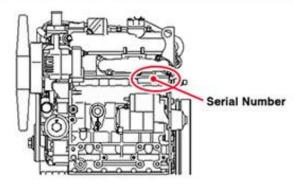


- · Below exhaust manifold
- · Over crankcase, flywheel side

Kubota 03 Series

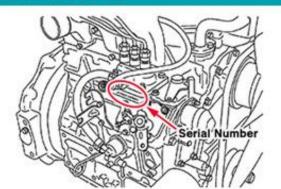


 Located on the mounting surface of injection pump

Kubota 07 Series

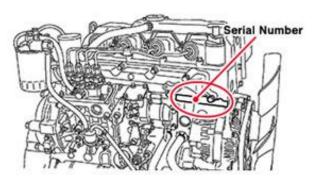


- · Below intake manifold
- · Over crankcase, fan side

Kubota V3 Series

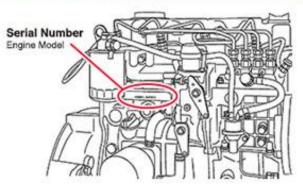


- · Below intake manifold
- · Over crankcase, flywheel side

Kubota EA/EL Series

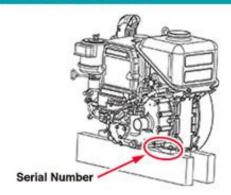


· Mounting surface at gear case side

Kubota OC Series

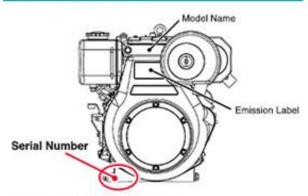


· Mounting surface at fan side

Kubota WG Series (WG752/WG972)

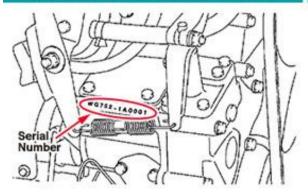

 Located on the side of fixing point of injection pump

Kubota WG Series (WG1605)

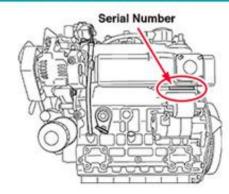

- · Below exhaust manifold
- · Over crankcase, flywheel side

All Engines



· Over cylinder head of engine



Do not use the model information shown on EPA labels.